


NYLAVEE


Computer Soundbar SK100 **User Manual**

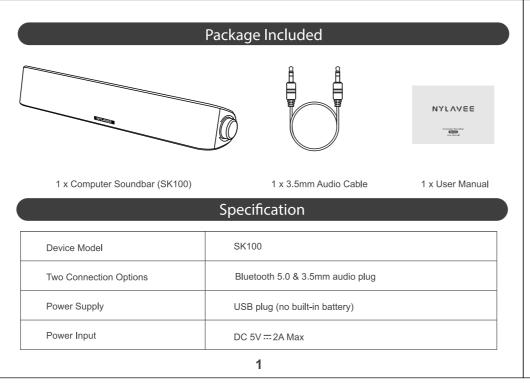

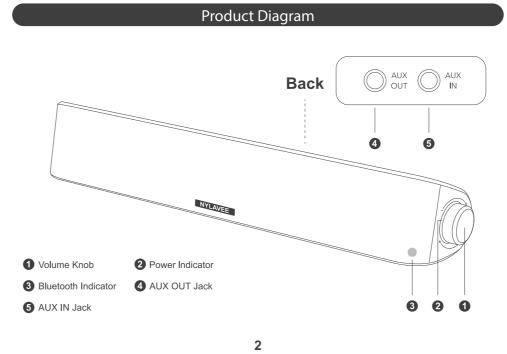

Function	Operation	Voice Prompt	LED Indicator
Power On	Insert the USB plug into any USB charging adapter or active computer USB port	Веер	Power Indicator stays solid blue
Power Off	Unplug the USB power cord	1	1
Bluetooth Mode On / Off	Press the Volume Knob twice quickly	Beep	1
Bluetooth Pairing	1	Beep	Bluetooth Indicator flashes blue and white alternately
Bluetooth Connected	1	Веер	Bluetooth Indicator (blue) flashes every 5 seconds
Bluetooth Out of Range	I	1	Bluetooth Indicator flashes blue and white alternately
Volume +	Turn the Volume Knob clockwise	Beep when highest volume is reached	1
Volume -	Turn the Volume Knob counter clockwise	1	1
Play / Pause	Press the Volume Knob once	/	/
Answer / Hang Up Phone Call	Press the Volume Knob once	Beep when answering	1
Decline an Incoming Call	Press and hole the Volume Knob for 1 second	1	1

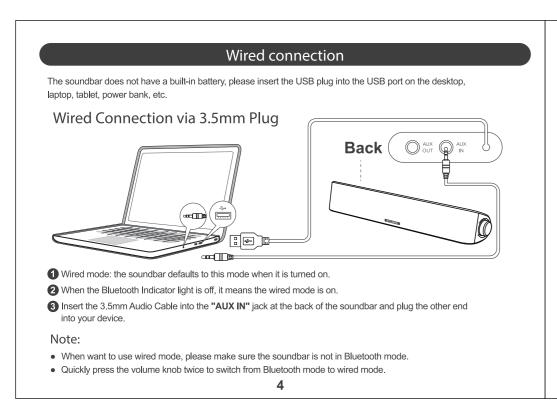

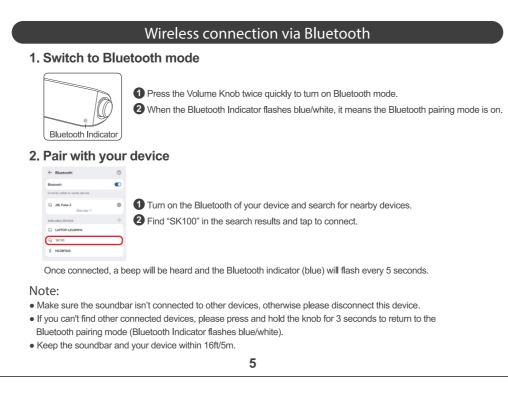

Attention Troubleshooting of Sound If there is no sound comes out from the soundbar, please try the following operations: ➤ Rotate the volume knob clockwise to raise the volume of the soundbar. Adjust the volume on your device. ➤ Press the volume knob to resume in case the soundbar paused. ➤ Re-insert the USB plug Troubleshooting of Bluetooth Connection ➤ Make sure that the soundbar Bluetooth paring mode is on(Bluetooth Indicator flashes blue/white). ➤ Make sure the Bluetooth of the soundbar is not connected by other devices. ➤ Unplug the 3.5mm Audio Cable from your device. ➤ Delete "SK100" memorized on your device, then search for "SK100" and connect again.

Worry-free Service Guarantee

- 30 days free return and exchange.
- 18 months warranty.
- Lifetime friendly customer service.

Please contact us for more details and further instructions via

service@nylavee.net

Extend 2-years warranty:

www.nylavee.net

FCC Compliance
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must withstand any interference received, including interference that may cause undesired operation.

FC C E RốHS 🖺 🖏