

NYLAVEE

2.1 CH Soundbar with Wireless Subwoofer

Model: SK070



User Manual

Important Safety Instruction

Thank you for purchasing the SK070 Soundbar. Please read this user manual carefully and keep for future reference.

Warning



Caution

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.
2. Never use the device unsupervised. Switch off the device whenever you are not using it, even if not using it only for a short while.
3. The appliance is not intended to be operated by means of an external timer or separate remote control system.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the apparatus.

8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
9. Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on an amplifier or receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.
16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

 
Safety Notes

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use this apparatus near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
6. Protect the power cord from being walked on or pinched particularly at plugs.
7. Only use attachments/accessories specified by the manufacturer.
8. Unplug this apparatus during lightning storms or when unused for long periods of time.
9. Refer all servicing to qualified service personnel. Servicing is required when it has been damaged in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have been fallen apart or exposed to rain or moisture and The soundbar doesn't work properly.
10. In order to disconnect the from the AC power completely, the AC plug must be removed from the AC outlet completely.


Power Source

This Sound bar is designed to operate in DC 24V \approx 1.25A

Product Diagram

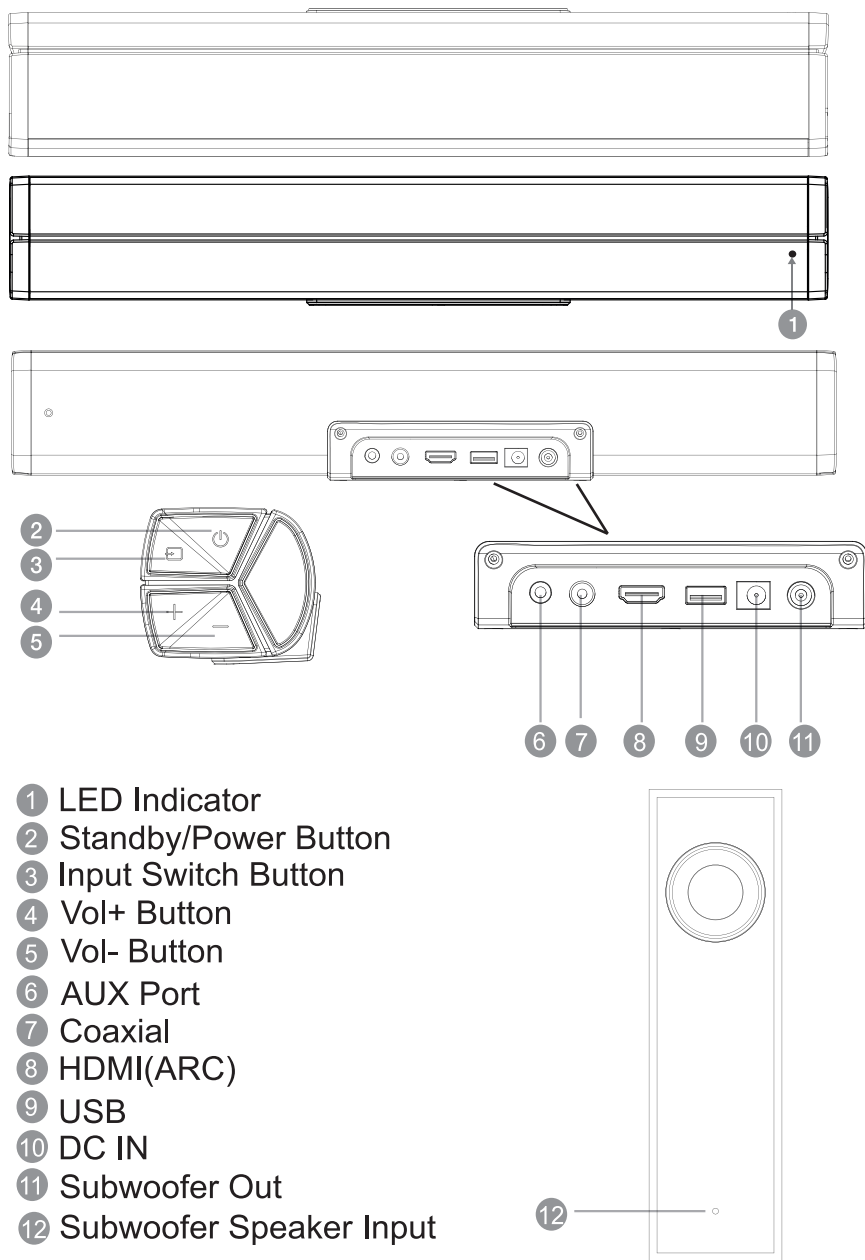

Remote Control

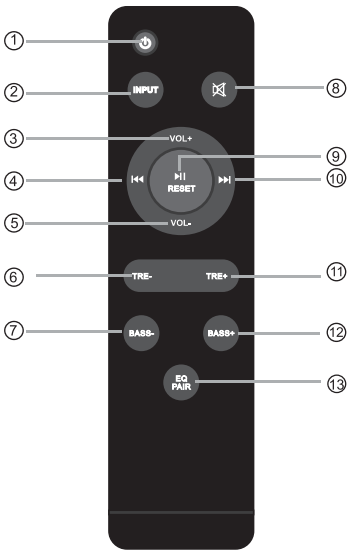 

1. Standby / Power
2. Input Switch (Bluetooth→COAXIAL→HDMI ARC→AUX→USB→Bluetooth)
3. Volume up
4. Previous track (only work under USB and Bluetooth mode)
5. Volume down
6. TRE-: Treble down
7. BASS-: Bass down
8. Mute / Unmute
9. Play / Pause / Reset

Play / Pause: Press to play or pause for current track (only work under USB and Bluetooth mode)

Reset: Press and hold the button for 3s to set all functions to defaults

10. Next track (only work under USB and Bluetooth mode)

11. TRE+: Treble up

12. BASS+: Bass up

13. EQ / PAIR

EQ: Press to switch around 4 EQ modes: Music / Movie / News / Sport

 
 
Pair: Press and hold for 3s to disconnect paired BT device

Press and hold for 3s to connect back last disconnect BT device

Positioning the Soundbar

Place on a Flat Surface


Place the sound bar horizontally on a flat surface such as a TV unit or shelves and align it centrally with the TV screen. Allow some space between the speaker and the wall. Don't place inside a cabinet or on a walled shelf. Follow this guidance for best sound output and good airflow around the sound bar.

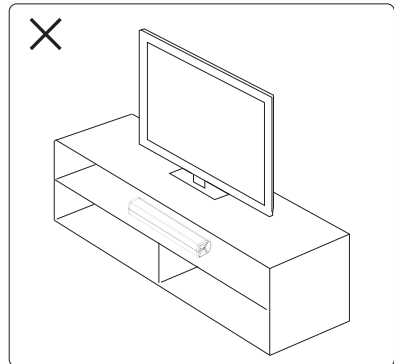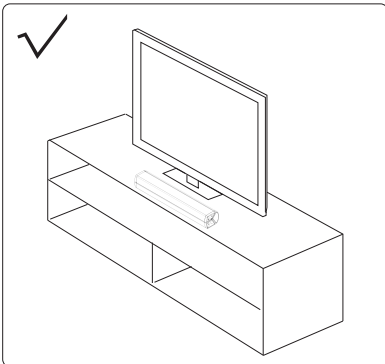

Operate Instructions

Power On/Off

 1. Plug the sound bar adapter into a wall outlet, it will automatically enter standby mode
2. Short-press the power/standby button either in soundbar of remote control to turn on the soundbar.
3. To turn off, press either the STANDBY button on remote control or soundbar or unplug from wall outlet.

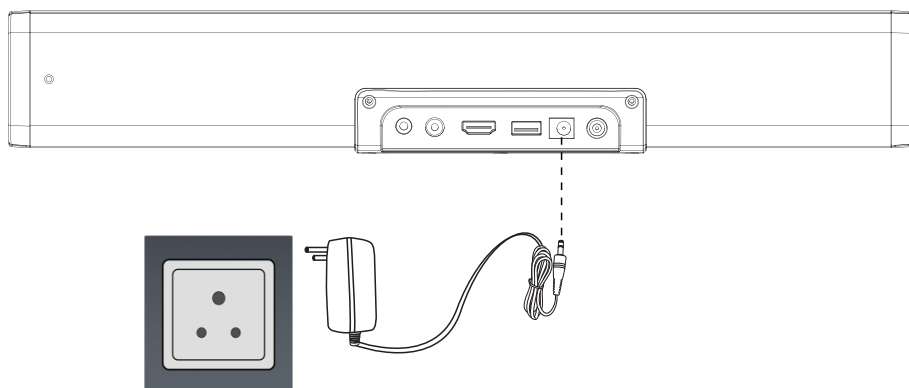

Setting the Soundbar

Press the Input Switch Button either on the soundbar or remote control to select the mode you need. The input mode will be indicated by the color of the indicator:

Blue = Bluetooth mode

 
Yellow = Coaxial mode

Cyan = HDMI(ARC) mode

Green = Aux mode

Pink = USB mode

Audio Connection

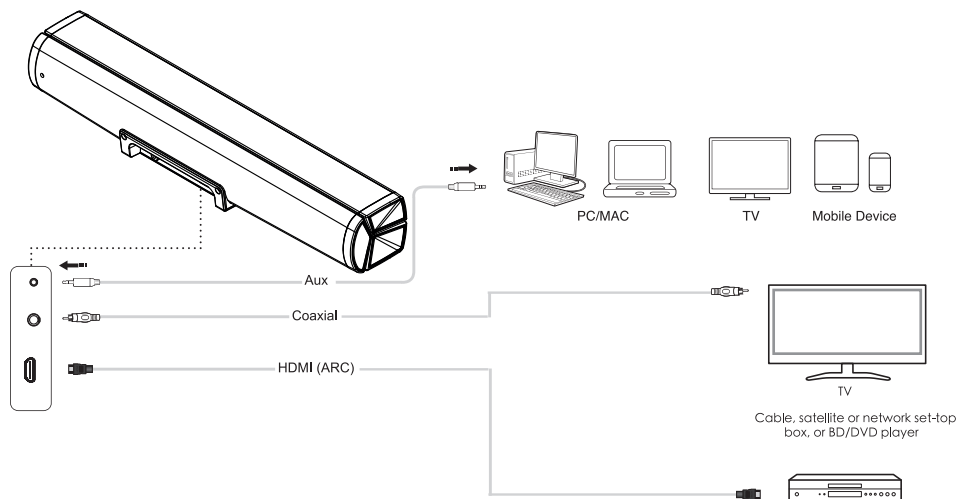


Bluetooth Mode

1. Press "Input" button on the soundbar or remote to switch to Bluetooth mode. The LED indicator will turn blue and flash when pairing.
2. Activate the pairing function on your phone or other compatible device and select "**SK070**".
3. When successfully paired, you will hear a tone and the indicator will stay solid blue.
4. The remote control includes Bluetooth mode playback controls


Notes:

 - If your Pairing device is switched off or manually disconnected, the sound bar will automatically enter pairing mode
- If the connected device is switched off or manual disconnected, the sound bar will automatically enter pairing mode, and the last connected device will be re-paired once you re-enter wireless range(10 meters). To connect to other devices, please repeat the above pairing steps.
- There is no automatic shutdown in pairing mode. The sound bar will remain in pairing mode even if no device is paired.

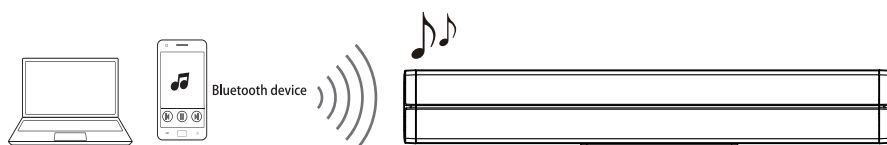

USB Mode

 1. Press "Input" button on the soundbar or remote to switch to USB mode.
The indicator will turn pink when USB mode has been selected.
2. Ensure that your USB flash drive contains MP3 audio files (other file types not supported)
3. Connect the USB flash drive to the USB port on the sound bar (or your own USB extension cable connected to the USB port), music will automatically play.
4. The remote control includes USB mode playback controls.

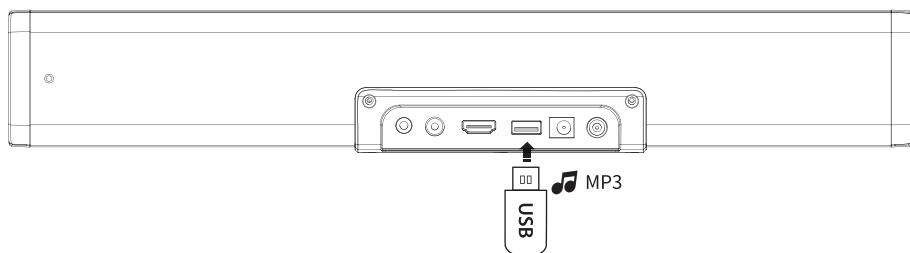


AUX Mode

1. Press "Input" button on the soundbar or remote to switch to AUX mode.
The indicator will turn green when mode has been selected.
2. Playback functions (play/pause, pair) cannot be adjusted through the SoundBar remote when in AUX mode.

Note:

 For some computers, you may need to access the audio control panel to manually select audio output device.

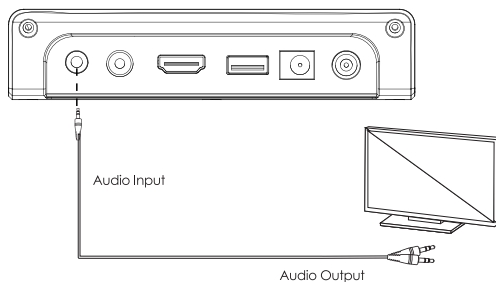


Coaxial Mode

1. Press "Input" button on the soundbar or remote to switch to Coaxial mode.

The indicator will turn yellow when Coaxial mode has been selected.

 2. Playback functions (play/pause, pair) cannot be adjusted through the SoundBar remote when in Coaxial mode.

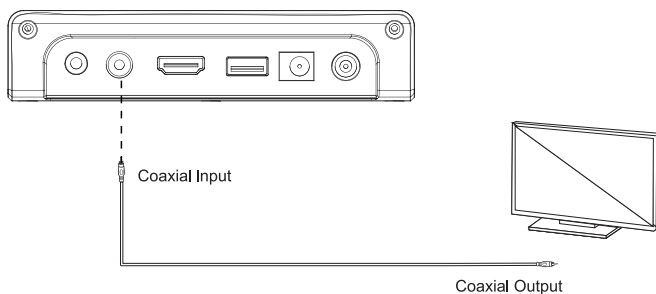


HDMI Mode

1. Press "Input" button on the soundbar or remote to switch to HDMI mode.

The indicator will turn cyan when HDMI mode has been selected.

2. The Soundbar supports HDMI with Audio Return Channel(ARC). If your TV is HDMI ARC compliant, you can play the TV audio through your Soundbar by using a single HDMI cable.

 3. Using a High Speed HDMI cable to connect the HDMI (ARC) port on the soundbar to the HDMI ARC port on the TV. The HDMI ARC connector on the TV might be labelled differently. For details, please refer to the TV user manual.

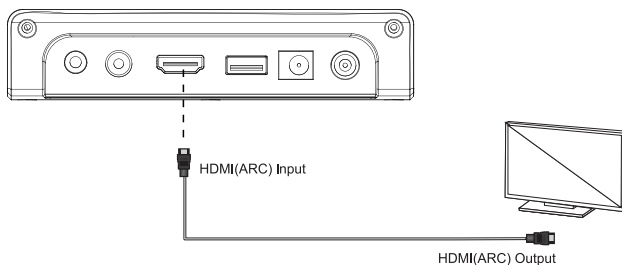

Trouble Shooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
There is no sound output from sound bar.	Another input source is selected.	Select an appropriate input source.
	The mute function is activated.	Cancel the mute function.
	The volume of sound bar or TV/other device is adjusted too low.	Increase the volume level on sound bar or by remote control or on TV.
	The power cable of the unit is not connected properly.	Make sure that the power cable of the unit is connected to an AC wall outlet securely.
	Input jacks on a playback device are connected.	Connect the input jack on the sound bar and the output jack on the playback device.
	Signals format that the sound bar cannot play when being input.	When sound bar and TV or other devices are connected by an audio cable through TV (ARC) port output, select the correct audio input and output. Make sure the digital audio output setting on the playback device to PCM format. Since the output format of our sound bar is PCM, if it is used, the decoding format of TV or other devices will be adjusted to PCM state.
The sound is distorted or echoed.	TV volume is not muted.	If you play audio from TV through the sound bar, make sure that the TV is muted.
The volume decreases when the unit is turned on.	The automatic volume adjustment function is activated. To prevent excessive loudness, the unit automatically controls its volume within a certain level when the unit is turned on.	Turn up the volume as required.
Noise is heard.	The sound bar is too close to another digital or high-frequency device.	Move those devices away from the sound bar.
The unit cannot be operated by using the remote control.	The unit is out of the operating range.	Use the remote control within the operating range.
	The batteries are weak.	Replace with new batteries.
	The remote control sensor of the sound bar is exposed to direct sunlight or strong lighting.	Adjust the lighting angle or reposition the sound bar. Make sure our product cannot be used in sunlight.
The TV cannot be operated by using the TV's remote control.	The unit is blocking the TV's remote control sensor.	Position the unit so that it does not obstruct the TV's remote control sensor.
The unit cannot be connected to a Bluetooth device.	Bluetooth function of the device is not activated, not paired or connected correctly.	Restart the sound bar and try pairing again. Refer to the user manual of the device on how to enable the function and correctly connected the device. Disconnect the connected device, and then try again.
	Bluetooth is not selected as the input source.	Select Bluetooth as the input source.
	The unit is connected to a different Bluetooth device.	Un-pair the Bluetooth device that is currently connected and pair with the desired Bluetooth device.
	The unit is too far away from the Bluetooth device.	Move the Bluetooth device closer to this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near devices that emit electromagnetic waves.
	The Bluetooth device that you are using may not support the protocol.	Use a Bluetooth device that supports the protocol.
	The connection profile registered in the Bluetooth device may not be functioning correctly for some reason.	Delete the connection profile in the Bluetooth device and then connect the Bluetooth device to this unit.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Sound quality of audio play from a connected Bluetooth device is poor and connection is not stable.	The Bluetooth reception is poor.	Move the device closer to the sound bar, or remove any obstacle between the device and the sound bar.
No sound can be heard or sound breaks (Bluetooth mode)	The volume on the Bluetooth device may be too low.	Raise the volume on the Bluetooth device.
	Bluetooth is not selected as the input source.	Select the Bluetooth as the input source.
	Playback on the device has not been performed.	Perform playback on the device.
	The sound output on the Bluetooth device may not be set to this unit.	Select this unit as the output device on the Bluetooth device.
	The connection to the Bluetooth device was cut off.	Connect with the Bluetooth device one more time.
	The unit may be too far away from the Bluetooth device.	Move the Bluetooth device near this unit.
There is no sound from sound bar - HDMI TV (ARC) Mode	No qualified HDMI TV (ARC) cable is used & No signal is input on sound bar & connection and operation method is not correct.	<ol style="list-style-type: none"> 1. Make sure that the user connected TV and sound bar by a 19-core HD ARC cable. 2. The sound bar and TV are connected through TV (ARC) port output; make sure that the TV is ARC compliant. 3. Set the TV to HDMI ARC (CEC). Set the audio output mode of TV to PCM format. (Or refer to your TV user manual)
There is no sound from sound bar (USB mode)	USB file type is not support & Sound bar doesn't switch to USB input mode automatically when USB is inserted.	Make sure that USB flash drive contains MP3 files because other file types are not support. Switch the input mode once again, then playback again.

Specifications

Output Power (RMS):	Subwoofer - 35W Soundbar - 15W x 2 Total - 65W
Drive Parameters:	Subwoofer - 4.5" 6Ω Soundbar - 2" 4Ω
Frequency Response:	60Hz-20kHz
S/N Ratio:	≥ 66dB
Separation:	≥ 40dB
File Format Support(USB):	MP3
Line Input:	3.5 mm, Coaxial IN, HDMI(ARC)
Max Supported Memory Size(USB) :	32GB
BT Name:	SK070
BT Version:	5.0
Product Dimension (W X D X H):	Subwoofer: 100 x 185 x 355 mm Soundbar: 410 x 74 x 64 mm

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NYLAVEE

Manufacturer

Shenzhen Hanke Technology Co., Ltd

Address

Meipeng SKY311, No.3 Hebei Industrial Zone, Zhongxing Road, Ma'antang Community, Bantian Street, Longgang District, Shenzhen, Guangdong, China, 518000

E-mail

support@nylavee.net

Official Website

www.nylavee.net

Warranty Extension

www.warranty-hub.com



Made in China